

## Settings

### Change between °C and °F

The thermostat temperature display can be set to °C or °F. The default is °C.

With the thermostat off, press the following sequence of buttons: 'P', 'T', 'T' again, 'MODE'.

### Restore factory default settings

With the thermostat off, press the following sequence of buttons: 'P', 'T', 'T' again, ▽.

### Teaching RF thermostat ID code to control unit

CAUTION: The thermostat has already been programmed with a unique code. Do not attempt to teach the RF Thermostat ID code unless instructed by the manufacturer.

With the thermostat off, press the following sequence of buttons: 'P', 'T', 'T' again, △.



The LCD display will show 'CL' (Code Learn) for 2 seconds then return to the normal OFF state display. During this time a special code will be transmitted by the RF Thermostat to the Control Unit, causing the Control Unit to learn its ID.

# Millennium 8000 Series Thermostat



## Quick Start Guide



### On/Off

Press and release the  button. If the thermostat is off, pressing and releasing  will turn the thermostat on to the most recently selected working mode.



### Setting the day of the week and time

With the thermostat off, press and hold the 'T' button for 2 seconds or longer to initiate programming the time. *Time*, the *hour setting* and *AM/PM* will flash.

#### Setting the hour function



Press and release the  or  button to increase or decrease the hour setting by 1 hour.


 
#### Setting the minute function

Press and release, or press and hold the  or  button to increase or decrease the minute setting by 1 minute similarly to the hour setting.

Press 'OK' to accept and select the day of the week.

#### Setting the day of the week function

The temperature setting will now flash. Press and release the  or  button to increase or decrease the temperature setting by 1 °C.

Press and hold the  or  button for 2 seconds or longer to increase or decrease the temperature setting by 1°C every 0.5 seconds.

To accept the temperature press 'OK'.

Period 1 is now set for the day/s of the week that you have chosen. The LCD will display **P2** to indicate that Period 2 can now be set for the same day/s of the week.

Repeat the programming process for periods 3 and 4.

After program 4 is set, press 'OK' and the program for the selected day/s will be set.

The thermostat will now automatically turn off.

Repeat the programming process for any other periods/days that are required.

MO → TU → WE → TH → FR → MO TU WE  
TH FR → SA → SU → SU SA → MO TU WE  
TH FR SA SU

To accept the selected day/s of the week press 'OK'.

#### Setting the period starting time

The hour and AM/PM settings will now flash. To set the P1 starting time, press and release the  $\triangle$  or  $\nabla$  'N' button to increase or decrease the hour setting. Press and hold the  $\triangle$  or  $\nabla$  button for 2 seconds or longer to increase or decrease the hour setting by 1 hour every 0.5 seconds.

The hour function is in 12 hour time, so please ensure that AM/PM is set correctly.

To accept the hour press 'OK'.

The minute setting will now flash. Adjust the minute setting similarly, using ' $\triangle$  or  $\nabla$  button

To accept the minute press 'OK'.

#### Setting the temperature

Press and release the  $\triangle$  or  $\nabla$  button to change the day of the week to the following or previous day. Press and hold the  $\triangle$  or  $\nabla$  button for 2 seconds or longer to increase or decrease the day of the week by 1 day every 0.5 seconds.

Press 'OK' to complete setting.

The time and day of the week is now set.

#### Manual mode

The *manual* mode allows setting the temperature at any level.

*Manual* mode does not require that the time and day of the week are set.

#### Flame height and fan speed

The flame height and fan speed are not manually adjustable. The flame height and fan speed are set by the thermostat according to the difference between the set temperature and the current temperature.

#### Automatic mode

The *automatic* mode allows the temperature to be regulated according to a programmed level and time.

## Manually overriding the set program

At any time, the temperature or fan speed may be adjusted up or down similarly to operating in *manual* mode. However, whenever the thermostat changes to a new time period, the temperature will be set automatically according to that period's setting.

## Programming

Each day of the week can be programmed individually for 4 periods P1, P2, P3 and P4, making a total of 28 programmed periods.

Alternatively, a weekday program can be set, so the same program is used for Monday-Friday. Similarly, a weekend program can be set for Saturday-Sunday. The entire week can also have the same program.

Alternatively, a weekday or weekend program can be set with individual programs for the remaining days.

The suggested period settings for each day/s are:

Period 1 - morning

Period 2 - daytime

Period 3 - evening

## Period 4 - night-time

To begin programming

With the thermostat off, press and hold the 'P' button for 2 seconds or longer to initiate programming. The LCD will display **PROG**, *Pd* and the time at which the thermostat is currently set. **MO** will flash.

Period 1 can now be set.

Setting the day of the week

You must choose which day/s of the week you wish to program.

Press and release the  $\triangle$  or  $\nabla$  button to change the day of the week to the following or previous day. Press and hold the ' $\triangle$  or  $\nabla$ ' button for 2 seconds or longer to increase or decrease the day of the week by 1 day every 0.5 seconds.

The order that you can scroll through the days is as follows: