


How to remove heater from pallet

1) swing open door just enough that the top of the door clears the damper slide, and lift up the door from the underneath and tilt the top back towards you to remove the bushing from the hinge pin the gently lower down the door to remove the lower bushing from the hinge pin

2) to remove heater from pallet, locate the 2 bottom screws securing the bottom casing to the heater shown in detail A.


3) once removed gently pull the lower casing up and pull towards you (the heater door may need to be removed to achieve this.)

keeping in mind not to put too much tension on the fan switch wiring harness

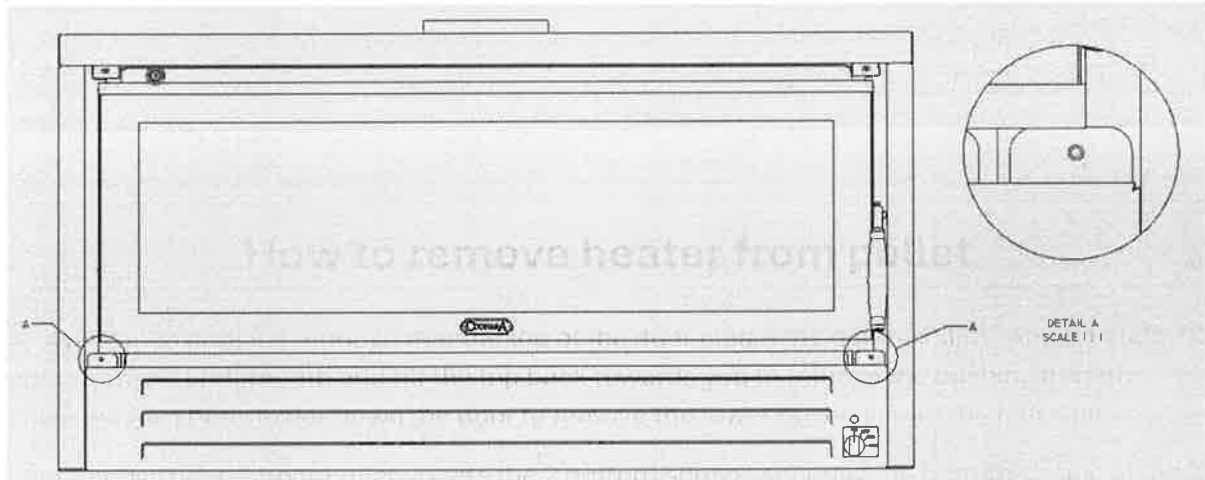

4) Once you've pulled the lower casing out of the way please locate the 3 Phillips head screws securing the heater base to the pallet shown in detail B, C and D. take note that the middle screw will be much longer than the other 2 screws

Once heater has been removed from pallet, please follow steps 2 and 1 to put the lower casing back on

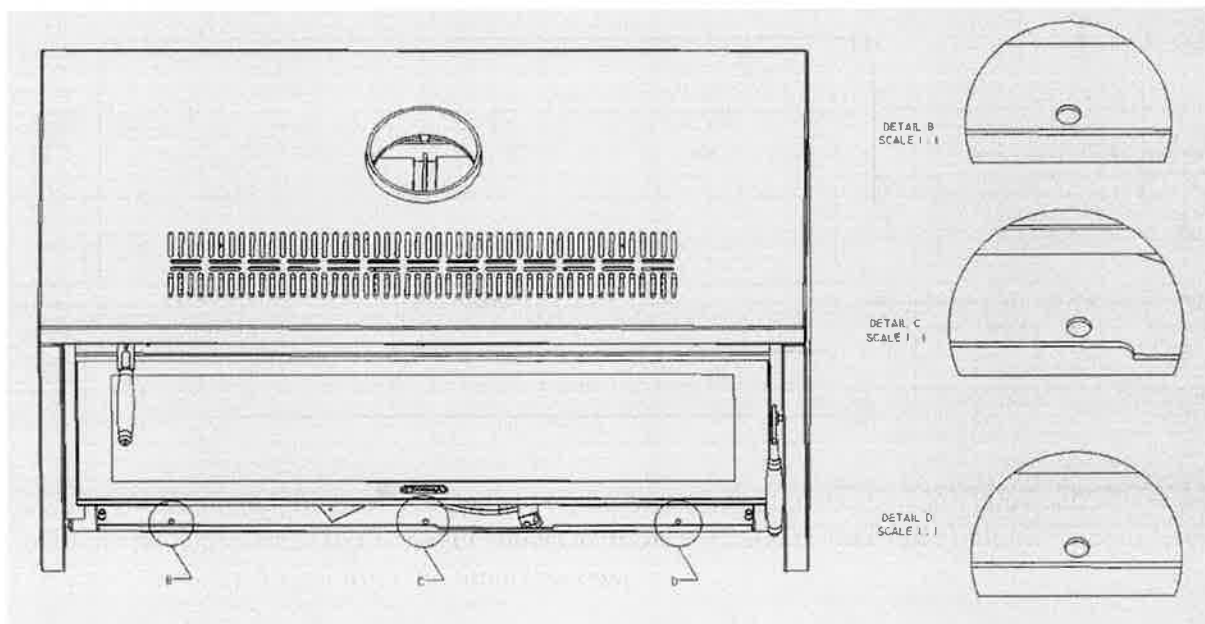

ADDENDUM TO **FIRST FIRE INSTRUCTION** IN THE
INSTALLATION & OPERATING INSTRUCTIONS

IMPORTANT NOTICE

THIS COONARA HEATER IS **NOT** A RADIANT
HEATER. IT IS A FAN FORCED HEATER.

THE FOLLOWING STEPS **MUST** BE FOLLOWED
TO AVOID DAMAGE TO THE HEATER

- 1. LIGHT YOUR HEATER AND AFTER 15 MINUTES TURN THE FAN TO LOW.**
- 2. AFTER RUNNING YOUR HEATER FOR 30 MINUTES TURN THE FAN SPEED TO EITHER 2 OR 3 TO SUIT YOUR COMFORT LEVELS.**
- 3. THE ROOM FAN **MUST** BE OPERATING **AT ALL TIMES** WHILST THE HEATER IS BURNING.**

NOW RELAX AND ENJOY YOUR AUSSIE ICON